


Development Kit Contents

- First time *Flea*®2 users are required to purchase this kit in addition to purchasing the initial camera:
- ACC-01-2005 4.5 meter, 9-pin to 9-pin locking IEEE-1394b cable for secure connection
 - ACC-01-2007 4.5 meter, 6-pin to 9-pin locking IEEE-1394a to 1394b cable for secure connection
 - ACC-01-10001 IEEE-1394b OHCI PCI Host Adapter 3-port 800Mb/s card OR FWB-PCIE-01: FirePRO low profile single bus IEEE-1394b PCI Express card
 - ACC-01-3000 1 meter GPIO wiring harness with Hirose HR25 8-pin male connector for easy triggering
 - FlyCapture*® SDK (C/C++ API and device drivers) CD

Physical Dimensions

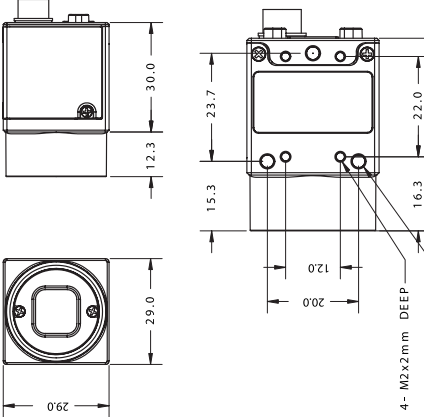

Camera Interface

IEEE-1394b Connector and Cables

The *Flea*2 has a standard 9-pin IEEE-1394b connector that is used for data transmission, camera control and powering the camera. The maximum 1394b cable length between any 1394 node (e.g. camera to PCI card) is 4.5m, as specified by the IEEE-1394 standard. Use standard, shielded twisted pair copper cables.

General Purpose I/O Connector

The *Flea*2 has a Hirose HR25 8-pin general purpose input/output (GPIO) female connector on the back of the case (P/N: HR25-7TR-85A). The FL2-DEVKIT includes a one (1) meter long wiring harness equipped with a male connector (P/N: HR25-7TP-8P; Digkey P/N: HR702-ND). Wires are color coded or labelled according to the table below to indicate functionality.

Diagram	Pin	Function	Function
	1	IO0	Input / Output (default Trigger_Src)
	2	IO1	Input / Output
	3	IO2	Input / Output / RS232 Transmit (TX)
	4	IO3	Input / Output / RS232 Receive (RX)
	5	GND	Ground pin for all pins
	6	GND	Ground pin for all pins
	7	V _{EXT}	Allows the camera to be powered externally
	8	+3.3V	Power external circuitry up to 150mA

Table 1: FL2 GPIO pin assignments

Diagram	Pin	Function	Function
	1	IO0	Opto-isolated Input (default Trigger in)
	2	IO1	Opto-isolated Output
	3	IO2	Input / Output / RS232 Transmit (TX)
	4	IO3	Input / Output / RS232 Receive (RX)
	5	GND	Ground for bi-directional IO, V _{EXT} , +3.3 V pins
	6	GND	Ground for opto-isolated IO pins
	7	V _{EXT}	Allows the camera to be powered externally
	8	+3.3 V	Power external circuitry up to 150mA

Table 2: FL2G GPIO pin assignments

To configure the GPIO pins, consult the "General Purpose Input / Output" section of the *PGR IEEE-1394 Digital Camera Register Reference*.

Inputs can be configured to accept external trigger signals. **Outputs** can be configured to send an output signal or strobe pulse. Refer to the *Flea*2 *Technical Reference* for detailed GPIO electrical characteristics.

Status LED

Steady on	camera is receiving power and initialized
Steady on and very bright	camera is acquiring and transmitting images
Flashing bright, then brighter	camera registers are being accessed
Steady or slow flashing on and off	camera firmware updated (requires power cycle), or possible error/problem

Standard Image Formats

•03S2C •03S2M •08S2C •08S2M •14S3C •14S3M •20S4C •20S4M •13S2C •13S2M •50S5C •50S5M

Model	Frames Per Second					
	1.875	3.75	7.5	15	30	60
160x120 YUV444			●●	●●	●●	●
320x240 YUV422	●●●●	●●●●	●●●●	●●●●	●●●●	●●
640x480 YUV411	●●●●	●●●●	●●●●	●●●●	●●●●	●
640x480 YUV422	●●●●	●●●●	●●●●	●●●●	●●●●	●
640x480 RGB	●●●●	●●●●	●●●●	●●●●	●●●●	
640x480 YI16	●●●●●●●●	●●●●●●●●	●●●●●●●●	●●●●●●●●	●●●●●●●●	
640x480 Y8	●●●●●●●●	●●●●●●●●	●●●●●●●●	●●●●●●●●	●●●●●●●●	●●●
800x600 YUV422		●●●●	●●●●	●●●●	●●	
800x600 RGB			●●●●	●●●●	●●	
800x600 YI16		●●●●	●●●●	●●●●	●●	
800x600 Y8			●●●●	●●●●	●●	
1024x768 YUV422	●●●	●●●	●●●	●●●	●	
1024x768 RGB	●●●	●●●	●●●	●●●		
1024x768 YI16	●●●●●●●●	●●●●●●●●	●●●●●●●●	●●●●●●●●	●●●●	
1024x768 Y8	●●●●●●●●	●●●●●●●●	●●●●●●●●	●●●●●●●●	●●●●	
1280x960 YUV422	●●	●●	●●	●●		
1280x960 RGB	●●●	●●●	●●●	●●●		
1280x960 YI16	●●●●●●●●	●●●●●●●●	●●●●●●●●	●●●●●●●●	●	
1280x960 Y8	●●●●●●●●	●●●●●●●●	●●●●●●●●	●●●●●●●●	●●	
1600x1200 YUV422	●●●	●●●	●●●	●		
1600x1200 RGB	●●	●●	●●			
1600x1200 YI16	●●●●	●●●●	●●●●			
1600x1200 Y8	●●●●	●●●●	●●●●			

NOTE: Full resolution images, maximum frame rates, and raw Bayer output (color cameras) can be achieved using Format 7. Access Format 7 modes using "Custom Image Mode" in FlyCap.

SPECIFICATIONS	FL2-03S2	FL2-08S2	FL2-14S3	FL2-20S4	FL2G-13S2M/C	FL2G-50S5M/C
Image Sensor Type	Sony progressive scan interline transfer CCD's with square pixels and global shutter, monochrome or color					
Image Sensor Model	ICX424 1/3"	ICX204 1/3"	ICX267 1/2"	ICX274 1/1.8"	ICX445 1/3" EXview HAD CCD™	ICX655 2/3" SuperHAD CCD™
Maximum Resolution¹	648(H)x488(V)	1032(H)x776(V)	1392(H)x1032(V)	1624(H)x1224(V)	1296(H)x964(V)	2448(H)x2048(V)
Pixel Size	7.4µm x 7.4µm	4.65 x 4.65µm	4.65 x 4.65µm	4.4 x 4.4µm	3.75 x 3.75µm	3.45 x 3.45µm
Analog-to-Digital Converter	Analog Devices 12-bit analog-to-digital converter					
Video Data Output	8, 12, 16 and 24-bit digital data (see <i>Supported Data Formats</i>)					
Image Data Formats	Y8, Y16 (all models), RGB, YUV411, YUV422, YUV444, 8-bit and 16-bit raw Bayer data (color models)					
Digital Interface	Bilingual 9-pin IEEE-1394b for camera control, video data transmission, and power					
Transfer Rates	100, 200, 400, 800 Mbit/s					
Maximum Frame Rate¹	648x488 at 80 FPS	1032x776 at 30 FPS	1392x1032 at 15 FPS	1624x1224 at 15 FPS	1296x964 at 30 FPS	2448x2048 at 7.5 FPS
Partial Image Modes	pixel binning and region of interest modes via Format_7					
Interfaces	9-pin IEEE-1394b for camera control and video data transmission, 4 general-purpose digital input/output (GPIO) pins.					
General Purpose I/O Ports	8-pin Hirose HR25 GPIO connector, opto-isolated pins for trigger and strobe (FL2G models only), bi-directional pins for trigger, strobe or serial port					
Gain Control	automatic / manual / one-push gain modes, programmable via software, 0dB to 24dB in 0.04dB increments					
Shutter Speed	automatic / manual / one-push modes, programmable via software, 0.02ms to greater than 10s (extended shutter mode)					
Synchronization	via external trigger, software trigger, or free-running					
External Trigger Modes	DCAM v1.31 Trigger Modes 0, 1, 3, 4 and 5¹ (multiple exposure, 03S2 and 08S2 models only), 14 (overlapped trigger), and 15 (multi-shot trigger)					
Voltage Requirements	power via Vext GPIO pin or 9-pin 1394b interface: 8 to 32 V, less than 2.5 W					
Mass/ Dimensions (L x W x H)	58 grams (without optics), 29mm x 29mm x 30mm (excluding lens holder, without optics)					
Memory Storage	(FL2G models only) 32MB frame buffer, 512KB non-volatile data flash					
Memory Channels	3 memory channels for custom camera settings					
Gain	Automatic/Manual/One-Push Gain modes, 0dB to 24dB					
Shutter	Automatic/Manual/One-Push Shutter modes, 0.01ms to 66.63ms @ 15 FPS, Extended shutter modes for exposure times longer than 5 seconds					
Lens Mount	C-mount					
Emissions Compliance	Complies with CE rules and Part 15 Class A of FCC Rules					
Operating/Storage Temperature	0° to 45°C, -30° to 60°C					
Camera Specification	IIDC 1394-based Digital Camera Specification v1.31					
Warranty	2 years					

¹ Trigger modes 4 and 5 not supported in 14S3C or 20S4C models.

1 Installation

1. Recommended System Configuration

- Windows XP Service Pack 1
- 512MB of RAM
- Intel Pentium 4 2.0GHz or compatible processor
- AGP video card with 128MB video memory
- PCI Express slot and 1394b card (not included) (32-bit slot required)
- Microsoft Visual C++ 6.0 (to compile and run example code)



2. Electrostatic Precautions and Camera Care

- Users who have purchased a bare board camera should:
 - Either handle bare handed or use non-chargeable gloves, clothes or material. Also use conductive shoes.
 - Install a conductive mat on the floor or working table to prevent the generation of static electricity.
- When handling the camera unit, avoid touching the lenses. To clean the lenses, use a standard camera lens cleaning kit or a clean dry cotton cloth. Do not apply excessive force.
- To clean the imaging surface of your CCD, follow the steps outlined in www.ptgrey.com/support/kb/index.asp?a=4&q=66.
- Extended exposure to bright sunlight, rain, dusty environments, etc. may cause problems with the electronics and the optics of the system.
- Avoid excessive shaking, dropping or mishandling of the device.

2 Installation

3. Install the IEEE-1394b PCI card



- Place the IEEE-1394b PCI card in an open PCI slot.
- Connect the 4-pin connector on the card to the PC power supply.
- Turn the computer back on and log into Windows.
- In most cases, the Windows IEEE-1394 drivers will be automatically installed for the card, with no user input required. However, in some cases the *Found New Hardware Wizard* will appear. Follow the prompts given by the Wizard to install the card.
- Open Windows Device Manager by going to the Control Panel > System > Hardware tab > Device Manager. Ensure that the PCI card is properly installed as an *IEEE 1394 Bus host controller*.

4. Install the FlyCapture® Software and Drivers

- Insert the software CD-ROM. If the Installation Wizard does not automatically run, browse to your CD-ROM directory and run *setup.exe*.
- Follow the installation instructions to install the software.



IMPORTANT NOTE for Windows XP Users

A dialog will appear prompting you to install the **FirePRO** driver. We strongly recommend doing this in order to take full advantage of 1394b 800Mb/s speeds. See this Knowledge Base article for further information:
www.ptgrey.com/support/kb/index.asp?a=4&q=171

3 Installation

5. Installing the Tripod Mounting Bracket (optional)

- The ASA and ISO-compliant tripod mounting bracket for the *Flea®2* attaches to the camera using the included M2x5 screws.

6. Connect the 1394b PCI Card and Cable to the Camera

- Plug the 4.5 meter, 9-pin to 9-pin, IEEE-1394b cable into the 1394b PCI card and the *Flea2* 1394b connector; the cable jack screws can be used for a secure connection. **NOTE:** The camera relies on the 9-pin 1394b cable to provide power. If using an interface card other than that provided, ensure that adequate power is provided.
- If the Microsoft Windows “*Found New Hardware Wizard*” appears, proceed to Step 7. Otherwise, proceed to Step 8.

7. Install the PGRCAM Driver

- Proceed to Step 8 if the FirePRO driver has been installed.
- Click “*Install from a list or specific location*” and click “*Next*”.
- Select “*Don’t search. I will choose the driver to install*” and “*Next*”.
- Click “*Have Disk*” and browse to *C:\Program Files\Point Grey Research\PGR FlyCapture\driver*, click “*Open*”, then “*OK*”.
- Select the camera model and click “*Next*”.
- You will be prompted to continue installation - click “*Continue Anyway*” then “*Finish*” to complete installation.

4 Installation

8. Confirm Successful Installation

- Check the Device Manager to confirm that installation was successful (PGRCAM driver install only). Go to the *Start* menu, select *Run* and enter “*devmgmt.msc*”.
- To test the camera’s image acquisition capabilities, run the FlyCap demo program. From the *Start* menu, select *All Programs > Point Grey Research > PGR FlyCapture > FlyCap.exe*.

5 Troubleshooting

The FlyCapture® User Guide and other technical references can be found in the *Programs > Point Grey Research > PGR FlyCapture > Documentation* directory. Our on-line Knowledge Base (www.ptgrey.com/support/kb/) also addresses the following problems:

- Article 21: Troublesome hardware configurations
- Article 88: Vertical bleeding or smearing from a saturated portion of an image
- Article 91: PGR camera not recognized by system and not listed in Device Manager
- Article 93: My laptop’s IEEE-1394 port or PCMCIA card doesn’t supply power to my camera
- Article 145: Image discontinuities or horizontal tearing of images when displayed on monitor
- Article 171: Performance of 1394 devices may decrease after installing Windows XP SP2
- Article 188: Image data acquired by my camera is corrupt and displayed images are broken
- Article 189: Image capture freezes after a period of successful image capture.

Contacting Point Grey Research

- Email:** For all general questions about Point Grey Research please contact us at info@ptgrey.com.
- For technical support (existing customers only) contact us at www.ptgrey.com/support/contact/.
- Main Office:** **Mailing Address:** Point Grey Research, Inc.
12051 Riverside Way
Richmond B.C. Canada
V6W 1K7
- Tel:** +1 (604) 242-9937
Toll Free (N.America only): +1 (866) 765-0827
Fax: +1 (604) 242-9938
Email: sales@ptgrey.com
- Knowledge Base:** Find answers to commonly asked questions in our knowledge base at www.ptgrey.com/support/kb/.
- Downloads:** Users can download the latest manuals and software from www.ptgrey.com/support/downloads/.



POINT GREY
RESEARCH

Flea®2

IEEE-1394b Digital Camera



Getting Started
Manual

Document revised September 17, 2008

Copyright © Point Grey Research Inc. 2007. All rights reserved.
PGR, the Point Grey Research, Inc. logo, Flea and FlyCapture are trademarks of Point Grey Research, Inc. in Canada and other countries.